



# Floor Vents

---

## Instructions

- + If there is a damper on the floor boot adapter, ensure that it is open
- + Place the floor vent into the hole
- + Use the lever to open the damper blades on the floor vent
- + If the lever is stiff, remove the vent and wiggle the blades at the back until the movement loosens sufficiently